
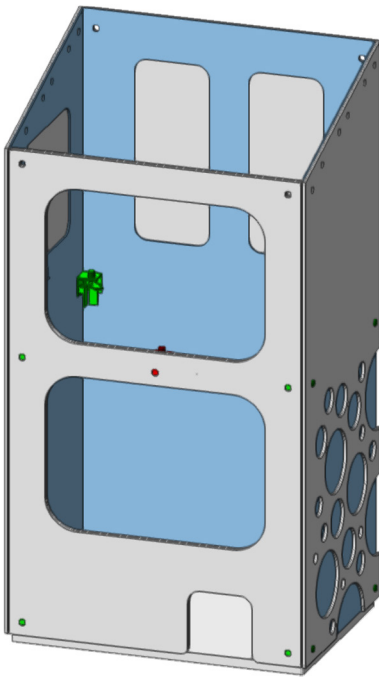


STEP ONE

- Attach C3 connectors to the outside corners.


STEP TWO

- Attach Frosty Cutout Panels to the sides and Front of Podium as shown.

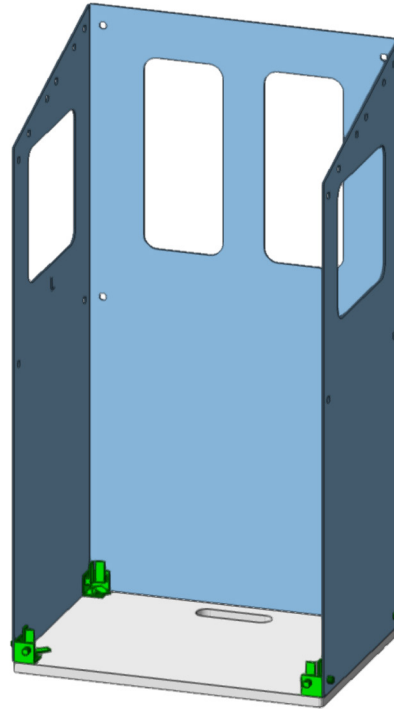


STEP THREE

- The levers into the frosty cutout panels will need to be disengaged to add the next panels.
- Add the decorative panels to the front and sides of the frosty panels.
- Add the rear access panel.
- Attach C3 connectors to the corners to hold the shelf.
- Attach a C2 Connector to the front to hold the shelf.

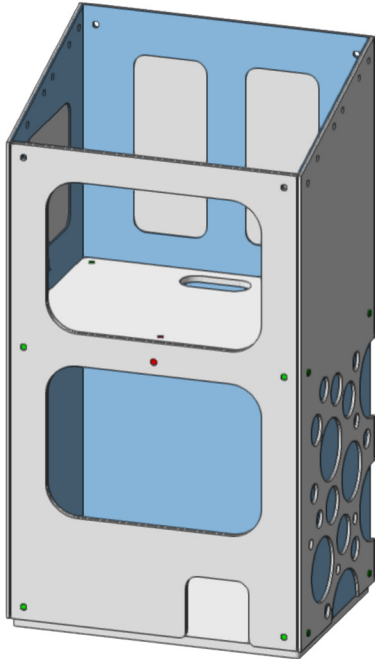


STEP FOUR

- Add the shelf panels with the cord holes towards the front of the unit, by dropping them into the unit from the top.
- Engage the levers to lock in the shelves.

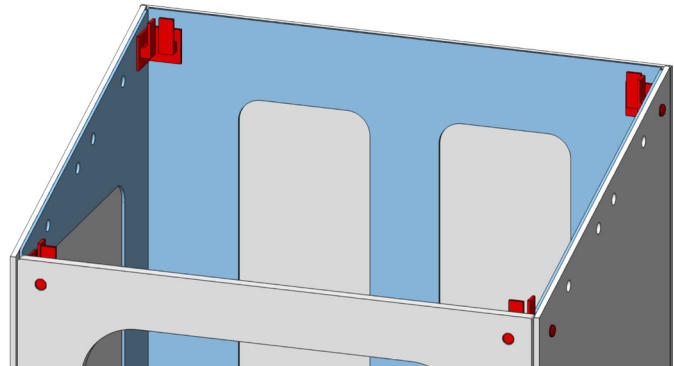

STEP FIVE

- Add C2 connectors to each corner.
- Add C2 and C4 connectors along the sides to attach the topper panel.

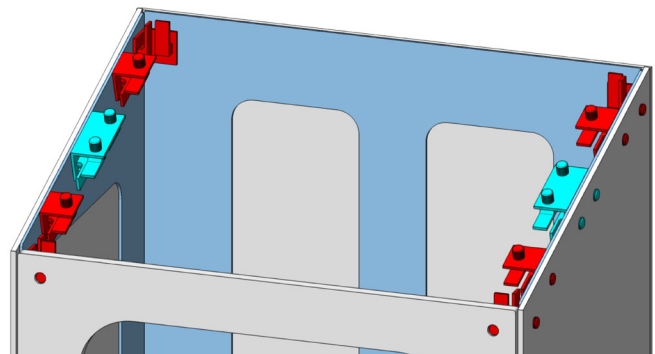

STEP SIX

- Add the podium top panel.

