

Setup guide Regular Speaker System

1



Run the multicable with the red strap to the lower subwoofer. Plug the True1 power plug into the lower subwoofer's power input.

Plug the XLR signal male plug of the multicable into the speaker input connection of the lower subwoofer.



2

3



Plug the XLR signal female plugs of the multicable into your audio mixer or DJ mixer.

Plug in the Schuko Power Plug of the multicable into a power supply near the mixer. You can use the 4-way



4

5



Connect the True1 Powerplug of the multicable with the yellow strap to the power output of the lower subwoofer.

Plug the XLR signal female plug of the multicable with the yellow strap in the Thru output of the lower subwoofer.



6

7



Run the multicable with the yellow strap to the top subwoofer. Plug the True1 power plug into the power input of the subwoofer.

Plug the XLR signal male plug of the multicable into the speaker input connection of the top subwoofer.



8

9



Connect the True1 Powerplug of the multicable with the yellow strap to the power output of the top subwoofer.

Plug the XLR signal female plug of the multicable with the yellow strap in the Thru output of the top subwoofer.



10

11



Connect the True1 Powerplug of the multicable with the yellow strap to the power input of the speaker.

Plug the XLR signal male plug of the multicable with the yellow strap into the speaker input.



12

13



You can now switch on all equipment and adjust to the desired volume. You are all set now to use the equipment.

To dismantle this audio set, please run the above-mentioned instructions in reverse (step 13 to 1)