
Setup guide Pipe & Drape

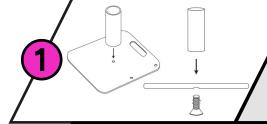



Screw the pin onto the baseplate using the bolt.


Make sure the bolt goes through the recessed side so it doesn't stick out.

Insert the uprights onto the pin of the baseplate. Make sure the baseplate is on a flat, stable surface.








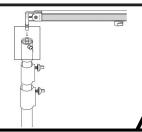

Connect the horizontal drape support to the top of an upright. Insert the pin into the slot, press the spring button to insert, then release it to lock.

Loosen the knob to slide the drape support to the desired width. Once adjusted, tighten the knob to secure it.

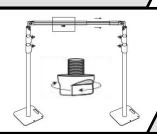








Attach the curtain to the horizontal drape support using the velcro strip along the top edge of the curtain.

Adjust the height of the system by extending the upright sections step-by-step (1 through 4), keeping the structure balanced.

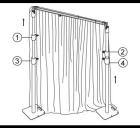







Final check: ensure everything is secure, balanced, and that the curtain hangs neatly.

Your Pipe & Drape system is now ready for use!

To dismantle this pipe & drape system, please run the above-mentioned instructions in reverse (step 7 to 1)